

EC-360




Snijmachine op batterijen EC-360

Coupeuse électrique sans cordon EC-360

Cordless electric shear EC-360

Elektrohandschneidemaschine auf Accu EC-360

Ref. 072.390.002

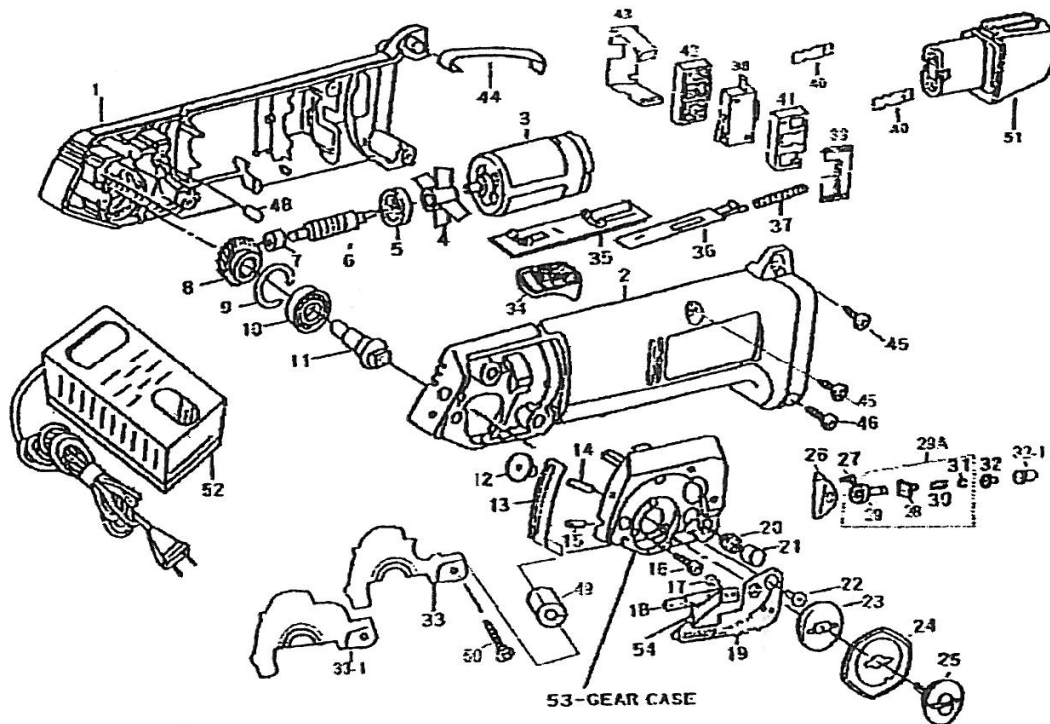

PART NO.	DESCRIPTION
EC-360-A01	072.338.101 Right housing
EC-360-A02	072.338.102 Left housing
EC-360-A03	072.338.103 Motor
EC-360-A04	072.338.104 Motor fan
EC-360-A05	072.338.105 Ball bearing
EC-360-A06	072.338.106 Worm gear
EC-360-A07	072.338.107 Bushing
EC-360-A08	072.338.108 Helix gear
EC-360-A09	072.338.109 Retaining ring
EC-360-A10	072.338.110 Ball bearing
EC-360-A11	072.338.111 Gear shaft
EC-360-A12	072.338.112 Nut
EC-360-A13	072.338.113 Finger guard
EC-360-A14	072.338.114 Screw
EC-360-A15	072.338.115 Screw
EC-360-A16	072.338.116 Screw
EC-360-A17	072.338.117 Screw
EC-360-A18	072.338.118 Cutting blade with carbide
EC-360-A19	072.338.119 Leg
EC-360-A20	072.338.120 Spring
EC-360-A21	072.338.121 Oil felt
EC-360-A22	072.338.122 Screw
EC-360-A23	072.338.123 Helix gear support
EC-360-A24	072.338.124 10 sided knife
EC-360-A25	072.338.125 Knife lock screw
EC-360-A26	072.338.126 Sharpener holder
EC-360-A27	072.338.127 Screw
EC-360-A28	072.338.128 Square sleeve for stone
EC-360-A29	072.338.129 Stone
EC-360-A29A	072.338.170 Stone assy

PART NO.	DESCRIPTION
EC-360-A30	072.338.130 Spring
EC-360-A31	072.338.131 Ring
EC-360-A32	072.338.132 Push knob for stone
EC-360-A32-1	072.338.171 Sleeve for 29A
EC-360-A33	072.338.133 Knife guard
EC-360-A33-1	072.338.172 Knife guard
EC-360-A34	072.338.134 On-off handle
EC-360-A35	072.338.135 Switch housing
EC-360-A36	072.338.136 Slide
EC-360-A37	072.338.137 Spring
EC-360-A38	072.338.138 Micro switch
EC-360-A39	072.338.139 Switch holder
EC-360-A40	072.338.140 Switch slide
EC-360-A41	072.338.141 Left switch clip
EC-360-A42	072.338.142 Right switch clip
EC-360-A43	072.338.143 Switch holder
EC-360-A44	072.338.144 Battery clamping
EC-360-A45	072.338.145 Screw
EC-360-A46	072.338.146 Screw
EC-360-A48	072.338.148 Stopper
EC-360-A49	072.338.149 Knife guard socket
EC-360-A50	072.338.150 Knife lock screw
EC-360-A51	072.338.151 Battery 9.6V
EC-360-A52	072.338.152 Battery charger
EC-360-A53	072.338.153 Gear case
EC-360-A54	072.338.154 Guide plate