

**NAALDPLATEN - PLAQUES AIGUILLES - NEEDLE PLATES SINGER
 SCHUIFPLATEN - COUVERCLES GLISSIERES - COVERPLATES SINGER**



Ref : 006117009
 Needle plate
 darning
 Singer 1105/6,
 1120/30

077.006.117



Ref : 074567
 Needle plate
 BBL BL1506
 Simplicity SL1650

077.074.567



Ref : 15280
 = 125319LG
 = 125113
 = 173585
 = 352262
 Needle plate
 Singer 15/88-91
 077.015.280



Ref : 137306
 Needle plate
 Singer 6408-23

077.137.306



Ref : 137306-901
 Needle plate
 Singer
 6408/12/16/23
 (no SPR)

077.137.307



Ref : 137312-451
 C/plate
 Singer 6408,
 6412, 6423

077.137.312



Ref : 141000235
 Needle plate
 White 2000
 Singer 14J334

077.141.235



Ref : 15147
 S/plate
 Singer 15-30

077.015.147



Ref : 15280 LG
 Needle plate
 Singer 15 CL,
 HA-1

077.015.280



Ref : 163477
 S/plate
 Singer 600 series

077.163.477



Ref : 163727
 Needle plate
 Singer 600 S.S.

077.163.727



Ref : 168081
 S/plate
 Singer 117

077.168.081



Ref : 168096
 Needle plate
 Singer 117

077.168.096



Ref : 171137
 (1 trou)
 Needle plate
 Singer 417, 750
 S.S.

077.171.137



Ref : 171470
 Needle plate
 Singer 900, 920
 S.S.

077.171.470



Ref : 172200
 = 503586
 Needle plate
 Singer 401/3,
 600, etc.

077.172.200



Ref : 172956
 S/plate
 Singer 417, 750
 series

077.172.956



Ref : 174198 (ZZ)
 =506229=181842
 =502398=507222
 =507113
 Needle plate
 Singer 417, 750
 series

077.174.198



Ref : 174529
 Needle plate
 Singer 600 S.S.

077.174.529



Ref : 179982
 S/plate
 Singer 5605,
 5705, 5610, 5710

077.179.982



Ref : 181871 (ZZ)
 Needle plate
 Singer 900, 920

077.181.871



Ref : 280163
 Needle plate
 Singer 1730

077.280.163



Ref : 283007
 Needle plate
 Singer XL1, CXL,
 XL10, XL50





















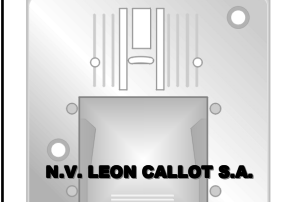 



077.283.007



Ref : 283406
 Darning plate
 Singer XL1/10,
 CXL

077.283.406

**NAALDPLATEN - PLAQUES AIGUILLES - NEEDLE PLATES SINGER
 SCHUIFPLATEN - COUVERCLES GLISSIERES - COVERPLATES SINGER**

 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 310739-451 S/plate Singer 502/7/9/13, 530, 830</p> <p>077.310.739</p>	 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 312391 = 310706 N/plate Singer 500, 800 series</p> <p>077.310.706</p>	 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 312777 (ZZ) = 383952 SINGER Serie 2500-4500-4700- 5800 Melody-5910-7028-Serie 6200-9800-Samba Serenade Symphony Concerto-Harmony- 2010-9900-4610-4613-4610- 4617-4623-5805-5808-5910- 6201-6202-6211-6212-6215- 6217-6233-6234-6235-6267- 6268-9110-9113-9117-9124- 9133-9416-9606-9608 077.312.777</p>
 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 313066 (3 trous) SINGER Serie 2500-4500- 4700-5800 Melody-5910-7028 -Serie 6200-9800-Samba Serenade Symphony Concerto -Harmony-4610-4613-4610- 4617-4623-5805-5808-5910- 6201-6202-6211-6212-6215- 6217-6233-6234-6235-6267- 6268-9110-9113-9117-9124- 9133-9416-9606-9608 077.313.066</p>	 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 313117 C/plate Singer 6200, 4600</p> <p>077.313.117</p>	 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 313166 S/plate Singer 4613/7/23, 6234/5, 6267/8, 9100 series</p> <p>077.313.166</p>
 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 314666 S/plate Singer 4610, 5910, 6233, 6250, 700/5, 9000, 9200, 9400</p> <p>077.314.666</p>	 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 316004 C/plate Singer darning 6408, 6412, 6416, 6423</p> <p>077.316.004</p>	 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 316108 Needle plate Singer 342, 345, 5123, 5127</p> <p>077.316.108</p>
 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 32569 S/plate Singer 66, 99 class</p> <p>077.032.569</p>	 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 32602 Needle plate Singer 66, 99, 185, 192</p> <p>077.032.602</p>	 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 350350 Needle plate Singer 14U595</p> <p>077.350.350</p>
 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 350361 Rollhem plate Singer 14U595</p> <p>077.350.361</p>	 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 352105 Needle plate Singer 237</p> <p>077.352.105</p>	 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 352262 Needle plate Singer 239</p> <p>077.352.262</p>
 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 352461-892 = 137621 = 446027 = 317398 Needle plate Singer 200, 300, 400</p> <p>077.290.000</p>	 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 356713 Needle plate Singer FM17/22, 5040C, 4825/30/38, 5705, 9818 new, 2600, 4800</p> <p>077.356.713</p>	 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 356714 Needle plate S.S. Singer 5040C, FM17, FM22, 2600</p> <p>077.356.714</p>
 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 356715 S/plate Singer 5040C, FM17, FM21, 5050, 5070</p> <p>077.356.715</p>	 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 357191-001 C/plate Singer 5417C, 5430C</p> <p>077.357.191</p>	 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 357193 Needle plate Singer 6305/10/14/18, 6300</p> <p>077.357.193</p>
 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 357745-001 Needle plate Singer 5417C, 5430C, 6038</p> <p>077.357.745</p>	 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 370216 = 370278 Needle plate Singer 14U65, 85</p> <p>077.370.278</p>	 <p>N.V. LEON CALLOT S.A.</p> <p>Ref : 370218 Rollhem plate Singer 14U65, 85</p> <p>077.370.218</p>

**NAALDPLATEN - PLAQUES AIGUILLES - NEEDLE PLATES SINGER
 SCHUIFPLATEN - COUVERCLES GLISSIERES - COVERPLATES SINGER**



Ref : 381495
 C/plate
 Singer 200, 300,
 400

077.381.495



Ref : 382710
 S/plate
 Singer 724, 774/6

077.382.710



Ref : 382801
 S/plate
 Singer 900-2000

077.382.801



Ref : 383720
 = 382806
 Needle plate
 Singer 2000,
 2005

077.383.720



Ref : 383698 (ZZ)
 Needle plate
 Singer 2001

077.383.698



Ref : 385012
 = 385105
 Needle plate
 Singer Quantum
 LE, 4000, Futura

077.385.012



Ref : 385101
 Darning plate
 Singer LE, DSX

077.385.101



Ref : 385106
 C/plate
 Singer Quantum
 LE

077.385.106



Ref : 386002
 C/plate
 Singer Quantum
 XL100

077.386.002



Ref : 386056
 Needle plate
 Singer Quantum
 XL100

077.386.056



Ref : 387043
 Needle plate
 Singer Quantum
 XL1000

077.387.043



Ref : 387347
 Needle plate
 Singer XL5000,
 XL6000

077.387.347



Ref : 387427
 S/plate
 Singer 5000

077.387.427

Ref : 406-5101-01A
 Needle plate
 BBL BL3-318, BL3-406,
 BL3-416, BL3-426
 Simplicity SL600, 660

077.406.510



Ref : 408034
 S/plate
 Singer 935U,
 1411U, 1040,
 1425, 1200

077.408.034



Ref : 409286
 Needle plate
 Singer 935, 1411,
 1425, 8002, 8007,
 8019, 1040, 1411

077.409.286



Ref : 412688
 Needle plate
 Singer 14U12, 32

077.412.688



Ref : 412730
 Needle plate
 Singer 14U34,
 44, 46, 64, 234,
 286, 344, 354,
 444, 454

077.412.730



Ref : 412784
 = 93-414127-84
 Rollhem plate
 Singer 32, 34, 52,
 14U

077.412.784



Ref : 412786
 = 93-414127-86
 Needle plate
 Singer 14U13, 53

077.412.786



Ref : 423134
 Needle plate
 Singer 2210,
 2114, 8614,
 9500/600,
 2100, 2200

077.423.134



Ref : 446481
 S/plate
 Singer 6201-6217

077.446.481



Ref : 447580
 Needle plate
 Singer 2210,
 2112, 1480, 1490,
 2100, 2200, 9500,
 9600














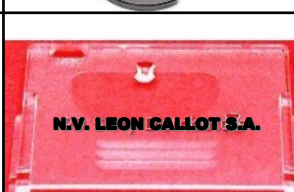 
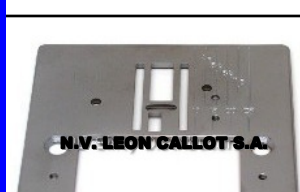 


077.447.580



Ref : 44838-891
 S/plate
 Singer 200, 300,
 400

077.044.838

**NAALDPLATEN - PLAQUES AIGUILLES - NEEDLE PLATES SINGER
 SCHUIFPLATEN - COUVERCLES GLISSIERES - COVERPLATES SINGER**

 <p>Ref : 44985 Needle plate S.S. Singer 240, 250, 413-478</p> <p>077.044.985</p>	 <p>Ref : 45358 S/plate Singer 201, 1200-1</p> <p>077.045.358</p>	 <p>Ref : 45940 Needle plate Singer 221, 301 (no hook mounting block) (no markings)</p> <p>077.045.940</p>
 <p>Ref : 45941 Needle plate Singer 221, 301 (no markings)</p> <p>077.045.941</p>	 <p>Ref : 531663 Needle plate Singer 3102/3, 1812, 2300, 6011, 6012, 6021, 1280</p> <p>077.531.663</p>	 <p>Ref : 542362 Needle plate Singer 690</p> <p>077.542.362</p>
 <p>Ref : 546018 S/plate Singer 610, 680, 690</p> <p>077.546.018</p>	 <p>Ref : 549841 Needle plate Singer 223, 224</p> <p>077.549.841</p>	 <p>Ref : 550443-452 Needle plate Singer 14U544, 554 (4-thread)</p> <p>077.550.443</p>
 <p>Ref : 550445-452 Needle plate Singer 14U555 (5-thread)</p> <p>077.550.445</p>	 <p>Ref : 55503 S/plate Singer 127 rear</p> <p>077.055.503</p>	 <p>Ref : 55504 S/plate Singer 127 front</p> <p>077.055.504</p>
 <p>Ref : 556016-452 Needle plate Singer 14U557</p> <p>077.556.016</p>	 <p>Ref : 556032-452 Needle plate- cover stitch Singer 14U557</p> <p>077.556.032</p>	 <p>Ref : 615-5101-01A Needle plate Simplicity SL550</p> <p>077.615.510</p>
 <p>Ref : 66525 S/plate Singer 101</p> <p>077.066.525</p>	 <p>Ref : 67421 Needle plate darning Singer 132Q, 140Q</p> <p>077.067.421</p>	 <p>Ref : 730146 C/plate Singer 2623</p> <p>077.730.146</p>
 <p>Ref : 730189 Needle plate Singer 2623</p> <p>077.730.189</p>	 <p>Ref : 74843 Needle plate Singer 2662</p> <p>077.074.843</p>	 <p>Ref : 76103 Needle plate Singer 2638, 1500</p> <p>077.076.103</p>
 <p>Ref : 76695 = 327711.0.00 Needle plate Singer 132</p> <p>077.076.695</p>	 <p>Ref : 79456 Needle plate Singer 118</p> <p>077.079.456</p>	 <p>Ref : 81024 C/plate Singer 118</p> <p>077.081.024</p>

**NAALDPLATEN - PLAQUES AIGUILLES - NEEDLE PLATES SINGER
 SCHUIFPLATEN - COUVERCLES GLISSIERES - COVERPLATES SINGER**

 <p>Ref : 8323 Needle plate Singer 27, 127</p> <p>077.008.323</p>	 <p>Ref : 86992 Needle plate Singer CE100, CE200</p> <p>077.086.992</p>	 <p>Ref : 87294 Darning plate Singer 7422-7466</p> <p>077.087.294</p>
 <p>Ref : 87340 Cover plate Singer 7422- 7466, 1500, 2638</p> <p>077.087.340</p>	 <p>Ref : B10301004 Needle plate Singer 14T948DS (zonder tong- Sans doigt)</p> <p>077.103.010</p>	 <p>Ref : B10302000 Needle plate complete Grote tong-Grand doigt mailleur : B1032.1000 Kleine tong-Petit doigt mailleur : B1031.1000 Singer 14T948DS Pfaff 740</p> <p>077.103.020</p>
 <p>Ref : E3A004500 Needle plate Singer 3810/20/25, 6510</p> <p>077.004.500</p>	 <p>Ref : E3A0253004 Needle plate Singer 6510, 7350/70 (no spring) Singer "Madame" 900ZH</p> <p>077.025.300</p>	 <p>Ref : E3A0255000 Needle plate Singer 6510, 7312, 7322, 7350, 7380 (complete)</p> <p>077.025.500</p>
 <p>Ref : G1041 Needle plate fix level Singer 14T957D</p> <p>077.001.041</p>	 <p>Ref : G1067A Needle plate stitch Singer 14T967DC</p> <p>077.001.067</p>	 <p>Ref : G2089A Needle plate Singer 14T957DS</p> <p>077.002.089</p>
 <p>Ref : HP30129-2 Needle plate Singer XL3000, XL3400</p> <p>078.030.129</p>	 <p>Ref : HP30196 C/plate Singer XL3400</p> <p>078.030.196</p>	 <p>Ref : HP32845 C/plate Singer 9910/20/40</p> <p>077.032.845</p>
 <p>Ref : NB1283004 Needle plate Singer 3503-3514</p> <p>077.128.300</p>	 <p>Ref : NB1293000 S/plate Singer 3810/20/25, 6510</p> <p>077.129.300</p>	 <p>Ref : NS1 Needle plate Singer 15CL- Combo-S.S.</p> <p>077.300.215</p>
 <p>Ref : P60402 C/plate Singer 221, univer with one screw PFW-221 (darning)</p> <p>077.060.402</p>	 <p>Ref : V620033001 Needle plate Singer 1105/6/20/30</p> <p>077.620.033</p>	 <p>Ref : 116080 Slide plate Singer 500, 800</p> <p>077.116.080</p>
 <p>Ref : 153152 = 174198 Needle plate Singer 700-702- 706-708-720-722- 726-728</p> <p>077.174.198</p>	 <p>Ref : 171285 = 352464 Needle plate Singer 416K, 418K</p> <p>077.171.285</p>	 <p>Ref : 171391 = 44985 = 102469 Needle plate Singer 270C, Fac.248-262-288- 588, 416K, 418K, 477K, 478K</p> <p>077.171.391</p>