















 






**DEKPLATEN - COUVERCLES PLAQUES - COVER PLATES**

<p><b>Ref : 312774-451</b>          Bed cover plate          Singer 6234/5, 6267/8</p> <p><b>077.312.774</b></p>	<p><b>Ref : 4113851-01</b>          Cover plate back          Viking/Husqvarna 6020</p> <p><b>077.411.385</b></p>	<p><b>Ref : X75249-002</b>          Cover plate control          Brother 760/E</p> <p><b>077.075.249</b></p>
<p><b>Ref : NB0233000</b>          Cover plate opener          Singer 3709-3722</p> <p><b>077.023.300</b></p>	 <p><b>Ref : XA8061051</b>          Cover plate          Brother 6452, 6552,          XL6040          Babylock</p> <p><b>077.008.061</b></p>	 <p><b>Ref : XC2369051</b>          Cover plate          Brother NX200/400/600</p> <p><b>077.002.369</b></p>
 <p><b>Ref : X56828151</b>          Cover plate          Brother PC7000,          PC8000, 895..</p> <p><b>077.568.281</b></p>	 <p><b>Ref : 137727051</b>          Cover plate          Brother PS1250-1950</p> <p><b>077.137.727</b></p>	<p><b>Ref : XC8983021</b>          Cover plate          Brother XL2600/10/20,          XL3500</p> <p><b>077.898.302</b></p>
 <p><b>Ref : 408611-20</b>          Cover plate          Elna 14, 22/4, 32/4/5/6,          52</p> <p><b>077.408.611</b></p>	<p><b>Ref : 395743-40</b>          Cover plate          Elna 3210-3230</p> <p><b>077.395.743</b></p>	<p><b>Ref : 502017104</b>          Cover plate          Janome 6125</p> <p><b>077.502.017</b></p>
 <p><b>Ref : 825018013</b>          Cover plate          Janome 7000, 7500</p> <p><b>077.825.018</b></p>	 <p><b>Ref : 830302002</b>          Cover plate          Janome 8000, 3018,          3023, 3123</p> <p><b>077.830.302</b></p>	 <p><b>Ref : 750036001</b>          Cover plate          Janome 9000, 4000</p> <p><b>077.750.036</b></p>
 <p><b>Ref : 820014003</b>          Cover plate          Janome Memory 7</p> <p><b>077.820.014</b></p>	 <p><b>Ref : 822004006</b>          Cover plate          Janome SD2014,          SS2015, SW2018E,          SL2022, SX2122,          MC5500, MC6000</p> <p><b>077.822.004</b></p>	 <p><b>Ref : 652009008</b>          Cover plate          Kenmore 385 series</p> <p><b>077.652.009</b></p>
 <p><b>Ref : 81024</b>          Cover plate          Singer 118</p> <p><b>077.081.024</b></p>	 <p><b>Ref : 730146</b>          Cover plate          Singer 2623</p> <p><b>077.730.146</b></p>	<p><b>Ref : 359015-900</b>          Cover plate          Singer 2712/18/22/24</p> <p><b>077.359.015</b></p>
<p><b>Ref : NB1293000</b>          Cover plate          Singer 3810/20/25, 6510</p> <p><b>077.129.300</b></p>	 <p><b>Ref : 357191-001</b>          Cover plate          Singer 5417C, 5430C</p> <p><b>077.357.191</b></p>	 <p><b>Ref : 313117</b>          Cover plate          Singer 6200, 4600          Plastic</p> <p><b>077.313.117</b></p>
 <p><b>Ref : 137312-451</b>          Cover plate          Singer 6408, 6412, 6423</p> <p><b>077.137.312</b></p>	 <p><b>Ref : 87340</b>          Cover plate          Singer 7422-7466</p> <p><b>077.087.340</b></p>	 <p><b>Ref : HP32845</b>          Cover plate          Singer 9910/20/40</p> <p><b>077.032.845</b></p>
 <p><b>Ref : 385106</b>          Cover plate          Singer Quantum LE</p> <p><b>077.385.106</b></p>	 <p><b>Ref : 386002</b>          Cover plate          Singer Quantum XL1000,          XL100, XL150</p> <p><b>077.386.002</b></p>	 <p><b>Ref : HP30196</b>          Cover plate          Singer XL3400</p> <p><b>078.030.196</b></p>

**DEKPLATEN - COUVERCLES PLAQUES - COVER PLATES**



**Ref : 4117611-01**  
 Cover plate  
 Viking/Husqvarna

**077.411.611**



**Ref : 4124591-01**  
 Cover plate  
 Viking/Husqvarna 315,  
 415, 425, 535, 545, 555

**077.412.459**



**Ref : 4123077-02**  
 Cover plate  
 Viking/Husqvarna S215,  
 S225, S400, S500

**077.412.307**



**Ref : 4123616-01**  
 Cover plate  
 Viking/Husqvarna S215-  
 S500  
 Slide out plate

**077.412.361**



**Ref : 316004**  
 Darning cover plate  
 Singer 6408, 6412

**077.316.004**

**Ref : E1A2593000**  
 Needle plate cover  
 support  
 Singer 3709, 3722,  
 3810/20/25

**077.259.300**



**Ref : 556032-452**  
 Needle plate cover stitch  
 Singer 14U557

**077.556.032**



**Ref : 381495**  
 Plastic feed cover plate  
 Singer 200, 300, 400  
 Plastic

**077.381.495**

**Ref : X56029001**  
 Spring, needle plate cover  
 Brother PC700

**077.056.029**



**Ref : P60402**  
 Universal cover plate  
 Singer 221

**077.060.402**



**Ref : XA3443151**  
 Darning plate  
 Brother VX series,  
 NZ36LG

**077.003.443**