

SCREWS-WASHERS-PARTS



BABYLOCK

008020306	077.008.020	Thread guide screw, Brother BL2001, Babylock ESG
008020316	078.008.020	Needle guide screw, Brother PE8200, Babylock ESE
012400432	077.012.400	Needle clamp screw, Brother VX1120/1125, Babylock
021400205	077.021.400	Nut 3P cover, Brother XL2010-3200, Babylock
052403006	077.052.403	Terminal box screw, Brother XL3010-3200, Babylock BL1556
060260316	077.060.260	Presser hook screw, Brother PC7000, Babylock
060300416	087.060.300	Feed dog screw, Brother XL3010-3200, Babylock BL1556
060300516	078.060.300	Feed dog screw, Brother PE8200, Babylock
060300616	077.060.300	Feed dog screw, Brother 900D, 920D, Babylock, Viking (Husqvarna)
062020416	077.062.020	Needle clamp screw, Brother PE100, Babylock EM
132584001	077.132.584	Needle plate screw, Brother 845, Babylock BL7500, BL8500
249	077.000.249	Thread guide needle bar screw, Singer 15, Babylock, Brother
407-5201-02A	078.407.520	Needle guard nut, Babylock
714-4103-02A	077.714.410	Needle set screw, Babylock, Simplicity
J1653	077.001.653	Shuttle driver spring screw, Brother, Singer, Alphasew, Babylock
NI-30001	077.030.001	Chaining tongue nut, Babylock for 4TW-5102-01A, 408-5102-01A
S250-B	077.000.250	Needle plate screw, Babylock 430, 432, 5030
S60569	077.060.569	Knife screw, Babylock SL843, 432
S60850	077.060.850	Needle set screw, Babylock 432, SL804
SI-30010	077.030.010	Chaining tongue screw, Babylock for 4TW-5102-01A, 408-5102-01A
SI-40015	077.040.015	Feed dog screw, Babylock BL4-736/D
SM-26003	077.026.003	Chaining tongue screw, Babylock for HA-G12-01A, SE-G12-01A
SS-06001	077.060.010	Chaining tongue screw, Babylock 605
SS-06004	077.006.004	Screw, Babylock for 714-5201-01A
SS-08002	077.008.002	Feed dog screw, Babylock for 205-7101
SS-08004	077.008.004	Looper holder screw, Babylock SE200
SS-08005	077.008.005	Needle set screw, Babylock BL3-318
SS-11003	077.011.003	Needle plate screw, Babylock BL3-407, 408, Simplicity SL500
SS-11016	077.011.016	Needle plate screw, Babylock BL4-738D, BL5180, Simplic. SL880D
WS-03101	077.003.101	Chain.tongue washer, Babylock for 4TW-5102-01A, 408-5102-01A
X58771051	077.058.771	Needle clamp screw, Brother PE100, Babylock EM
X59310001	077.059.310	Hook washer, Brother PE100, Babylock EM1
XA4052001	077.004.052	Needle clamp screw, Brother PE200, Babylock
XC2428021	077.002.428	Needle clamp screw, Brother NX200-600, Babylock
XC4266021	077.004.266	Needle clamp screw, Brother CS8100, 8200, Babylock
XZ0002051	077.002.051	Needle clamp screw, Brother UT2001, Babylock
XZ0388051	077.000.388	Needle clamp screw, Brother NV4000D, Babylock

BERNINA

0012975000	077.001.297	Needle set screw, Bernina 1005, 1006, 1008
014400422	077.144.004	Upper looper set screw, Brother 626, Viking 900, Bernina 800
016400632	077.400.632	Needle set screw, Brother 920, 934, Bernina
028030246	077.280.302	Needle bar thread guide washer, Brother 626D, Bernina, Viking
202.035.13	077.202.035	Handwheel screw, Bernina 910
304003731	077.304.003	Needle clamp screw, Bernina 830

BROTHER

008020306	077.008.020	Thread guide screw, Brother BL2001, Babylock ESG
008020316	078.008.020	Needle guide screw, Brother PE8200, Babylock ESE
009681204	077.009.681	Socket screw, Brother VX series
012400432	077.012.400	Needle clamp screw, Brother VX1120/1125, Babylock
014300332	077.014.300	Needle set screw, Brother 526/D, 546
014400332	077.014.400	Upper looper screw, Brother P1500
014400422	077.144.004	Upper looper set screw, Brother 626, Viking 900, Bernina 800
015300416	077.300.416	Needle set screw, Brother PL2000
015300516	077.300.516	Needle set screw, Brother PL1500
016300422	077.300.422	Needle set screw, Brother 546/D, 626
016400632	077.400.632	Needle set screw, Brother 920, 934, Bernina
017501615	077.017.501	Looper set screw, Brother PL1050, 64
021300106	077.021.300	Nut socket, Brother VX series
021400205	077.021.400	Nut 3P cover, Brother XL2010-3200, Babylock
021680206	077.021.680	Nut socket, Brother VX series
025040232	077.025.040	Upper knife washer, Brother 925D
025680133	077.025.680	Washer socket, Brother VX series
028040242	087.028.040	Lower knife spring washer, Brother PL1050, Viking
037200615	077.037.200	Spool stand shaft screw, Brother 925
052403006	077.052.403	Terminal box screw, Brother XL3010-3200, Babylock BL1556
060260316	077.060.260	Presser hook screw, Brother PC7000, Babylock
060300416	087.060.300	Feed dog screw, Brother XL3010-3200, Babylock BL1556
060300516	078.060.300	Feed dog screw, Brother PE8200, Babylock
060300616	077.060.300	Feed dog screw, Brother 900D, 920D, Babylock, Viking
060300806	077.603.008	Differential feed dog screw, Brother 929D
060400806	077.604.008	Lower knife screw, Brother 1034D
060400812	077.400.812	Feed dog screw, Brother 546D, 626
060670612	087.060.670	Lower looper screw, Thread guide Brother, Viking
060670812	077.606.708	Screw knife mounting, Brother 730 DE
061300416	077.613.004	Screw upper looper set, Brother 925
061400805	077.614.008	Lower knife screw, Brother PL1050
062020416	077.062.010	Needle clamp screw, Brother PE100, Babylock EM
062300406	077.062.300	Needle clamp screw, Brother PL1500/1600
062300412	078.062.300	Screw lower looper, Brother PL1500
062300604	078.623.006	Feed dog screw, Brother 925D, 935D
062300806	078.623.008	Needle clamp screw, mount Brother PL1500
062301605	077.062.301	Screw socket, Brother VX series
062630612	077.062.630	Needle clamp thread guide screw, Brother PQ1300

BROTHER

062670312		Thread guide set screw, Brother 730DE
062670512		Screw set, Brother B523 overlooper
062670612	087.062.670	Screw lower looper, Brother PL1050
100032001	074.300.403	Needle plate screw, Brother Serger
100043053	077.043.053	Stop motion knob screw, Brother XL20
100080003	087.100.080	Feed dog screw, Brother M760, B523N
105161002	087.105.161	Mounting washer, Brother 730DE, 760D
118521001	087.118.521	Needle clamp screw, Brother PQ1300/1500
126851001		Presser foot screw, Brother Serger 925D
131226001		Screw, Brother PC5000, PC6000, 895
132584001	077.132.584	Needle plate screw, Brother 845, Babylock BL7500/8500
132730151		Presser foot screw, Brother VX-1120
137805051	077.137.805	Hook washer, Brother PC5000/6000
137977000		Hook presser washer, Brother PC7000
138391001		Feed dog screw, Brother VX1010/1020
249	077.000.249	Thread guide needle bar screw, Singer 15, Babylock, Brother
256	077.256.000	Stop motion knob screw, Singer 15CL, Brother
J1653	077.001.653	Shuttle driver spring screw, Broth.-Sing.-Alphas.-BBL for JO1310A
UB3848001		Hook screw, Brother PE100 for inner
X05281001	077.005.281	Washer lower looper, Brother PL1050
X50487051	077.050.487	Needle plate screw, Brother VX, XL series
X53053001	077.053.053	Needle clamp screw, Brother PC5000/6000
X58771051	077.058.771	Needle clamp screw, Brother PE100, Babylock EM
X59310001	077.059.310	Hook washer, Brother PE100, Babylock EM1
X59530001	077.059.530	Presser foot screw, Brother PE100
X75051000	077.075.051	Washer tension, Brother 920D, 934D
X75121001	077.075.121	Screw lower looper t/guide, Brother
X75246001	077.075.246	Nut needle clamp, Brother 925D, 935D
X75721001	077.075.721	Screw set looper t/guide, Brother
X75770001	077.075.770	Screw, Brother PL1050, 640D
X76215001	077.076.215	Thread guide screw, Brother 900D, 920D
XA0644051	077.000.644	Needle clamp screw, Brother VX1120, 1125
XA1387051	077.001.387	Thread guide screw, Brother PC2800/3000
XA4052001	077.004.052	Needle clamp screw, Brother PE200, Babylock
XA4813051	077.004.813	Presser foot screw, Brother PE-300S
XA5133251	077.005.133	Needle set screw, Brother PE300S/400D
XB0304001	077.000.304	Needle presser nut, Brother 929D
XB1034001	078.001.034	Upper looper screw, Brother 1034D
XC2428021	077.002.428	Needle clamp screw, Brother NX200-600, Babylock
XC4266021	077.004.266	Needle clamp screw, Brother CS8100, 8200, Babylock
XZ0002051	077.002.051	Needle clamp screw, Brother UT2001, Babylock
XZ0388051	077.000.388	Needle clamp screw, Brother NV4000D, Babylock

ELNA

374101	077.374.101	Needle set screw, Singer 14U64, Elna L-4
396011-57	078.396.011	Screw for 396015-44 Antenna Elna
450600	077.450.600	Screw, Elna
467790-10	077.467.790	Adjustable feeder screw, Elna 9000
S12471	077.012.471	Handwheel screw, Elna T33, T34

JUKI

A1409-303-000	077.140.930	A1409-303-000 Needle set screw, Juki MO613
A1416-334-000	077.141.633	A1416-334-000 Needle set screw, Juki MO634D

NEW HOME/JANOME

000111201	077.000.111	Needle bar socket screw, New Home/Janome 204, 234
785026017	077.785.026	Needle clamp set screw, New Home/Janome 204, 234D

PFAFF

106254	077.106.254	Needle set screw, Singer 14U595, Pfaff 4860, 4870
91-001129-25	077.001.129	Needle clamp screw, Pfaff 1222
91-001382-15	077.001.382	Bobbin case tens.screw, Pfaff for 91-105544-91 black thumb adjust.
91-029030-45	077.029.030	Washer pin, Pfaff 260, 360 for spool
93-034116-25	077.034.116	Handwheel screw, Pfaff 1000, 1200—metal
93-034129-15	077.034.129	Needle set screw, Pfaff most models
93-0401655-BL	077.401.655	Handwheel screw, Pfaff 1200
93-838150-06	077.838.150	Thumb screw, Pfaff most models
993-70-612	077.993.612	Retaining screw, Pfaff 776
993-70-614	077.993.614	Needle clamp screw, Pfaff 776, 784
93-414030-4	077.414.030	Handwheel screw, Pfaff 4240/50/60
11-210909-35	077.210.909	Needle plate screw, Pfaff

SCREWS-WASHERS-PARTS

SINGER

106254	<b>077.106.254</b>	Needle set screw, Singer 14U595, Pfaff 4860, 4870—right
113413-451	<b>077.113.413</b>	Needle clamp screw, Singer 6210
113430-451	<b>077.113.430</b>	Bobbin case position plate screw, Singer 1802, 1872
		Rotating hook bobbin case position plate screw
		Rotating hook bobbin case retaining plate screw (adj. & position plate)
113439-451	<b>077.113.439</b>	Position bracket screw, Singer 313089, 137310-001
113489-451	<b>077.113.489</b>	Feed dog screw, Singer 6230
1172	<b>077.001.172</b>	Bobbin case tension screw, Singer
1173	<b>077.001.173</b>	Bobbin case tension screw, Singer 66
1253	<b>077.001.253</b>	Hook shaft set screw, Singer 15
137041	<b>077.137.041</b>	Needle plate screw, Singer 6408-6412
1380	<b>074.300.320</b>	Bobbin case tension screw, Singer 206
139975-452	<b>077.139.975</b>	Bobbin case tension screw, Singer for 421326
		Rotating hook bobbin case tension spring segment screw
140694	<b>077.140.694</b>	Hook gib screw, Singer 221, old style
140694 NS	<b>078.140.694</b>	Hook gib screw, Singer 221, new style
140751-853	<b>077.140.751</b>	Needle clamp screw, Singer 600
140751-900	<b>078.140.751</b>	Attachment screw, Singer 500, 600
141288-814	<b>077.141.288</b>	Feed dog screw, Singer 600
141338-896	<b>087.141.338</b>	Gear screw, Singer 600 series
141345-819	<b>077.141.345</b>	Position bracket screw, Singer 457-458
141771-809	<b>077.141.771</b>	Leg screws, Singer 630, 640
141808-452	<b>077.141.808</b>	Feed dog screw, Singer 6200, 6210
		Needle bar vibrating bracket stop screw 288, 588, 2404
		Bobbin winder stop screw 9410
141820-803	<b>077.141.820</b>	Bracket spring screw, Singer 600
141848-819	<b>077.141.848</b>	Slide plate spring screw, Singer 240
141882-805	<b>077.141.882</b>	Leg screw, Singer 750
141896-451	<b>077.141.896</b>	Feed dog screw, Singer 750, 900
141920-819	<b>077.141.920</b>	Needle thread guide screw, Singer 5605
		Needle clamp body screw
		Needle clamp thread guide screw
		Needle stop screw
		Feed dog screw
141920-819	<b>077.141.920</b>	Feed dog screw, Singer 240, 250
141949-873	<b>077.141.949</b>	A/T cover screw, Singer 417, 714
145	<b>077.000.145</b>	Screw shuttle race, Singer 15CL
155464	<b>077.155.464</b>	Position bracket washer, Singer
1560	<b>077.001.560</b>	Tension thumb nut, Singer 27, 127, 66
163950 S	<b>078.163.950</b>	Stitch length regulator screw and washer, Singer 500
191	<b>077.000.191</b>	Feed dog screw, Singer 66, 99
192797 S	<b>078.192.797</b>	Terminal box screw, Singer for 192797
200145	<b>077.200.145</b>	Hook loop screw, Singer 221
200592	<b>085.200.592</b>	Bobbin case tension mounting screw, Singer 221, 301
200964	<b>077.200.964</b>	Bobbin case latch screw, Singer 221, 301
201016	<b>077.201.016</b>	Tension spring screw, Singer 221, 301 = <b>085.201.016</b>
208	<b>074.300.150</b>	Feed dog screw, Singer 15, 221CL
233	<b>077.000.233</b>	Thread guide screw, Singer 15CL
248	<b>077.000.248</b>	Screw stop motion, Singer 15CL
249	<b>077.000.249</b>	Thread guide needle bar screw, Singer 15, Babylock, Brother
256	<b>077.256.000</b>	Stop motion knob screw, Singer 15CL, Brother
283477	<b>077.283.477</b>	Needle plate screw, Singer Quantum XL1
284040	<b>077.284.040</b>	Screw, Singer
313190-451	<b>077.313.190</b>	Position bracket washer, Singer 4552, 4622
314627-451	<b>077.314.627</b>	Thumb screw, Singer 6233, 6234, 6235
354134-451	<b>077.354.134</b>	Slide plate spring screw, Singer 530, 830
354183-452	<b>077.354.183</b>	Tension spring screw, Singer for 421326
		Rotating hook bobbin case tension regulating screw
354227-451	<b>077.354.227</b>	Position bracket screw, Singer 500
354229-451	<b>077.354.229</b>	Position bracket screw, Singer 50
354898-451	<b>077.354.898</b>	Needle clamp thumb screw, Singer 6233/4/5
354921-451	<b>077.354.921</b>	Slide plate spring screw, Singer 6230
		Feed & rotating hook drive shaft bearing block screw—4552, 4622, 7028, 9005, 9008, 9010, 9410
354973-451	<b>077.354.973</b>	Thread pull off insert screw, Singer 4613, 4617, 4623, 6233, 6234, 6235, 6267, 6268
355235-451	<b>077.355.235</b>	Feed dog screw, Singer 5605, 5705
355248-451	<b>077.355.248</b>	Needle clamp screw, Singer 5605, 5610
364063-451	<b>077.364.063</b>	Cover screw, Singer 5605, 5610
374101	<b>077.374.101</b>	Needle set screw, Singer 14U64, Elna L-4
374102	<b>077.374.102</b>	Needle clamp screw, Singer 14U34, 44, 64
374103	<b>077.374.103</b>	Needle clamp screw, Singer 14U64
374105	<b>077.374.105</b>	Edge guide screw, Singer 14U
374334	<b>077.374.334</b>	Needle set screw, Singer 14U65, 14U85
374364	<b>077.374.364</b>	Needle set screw, Singer 14U34 for left and right
374365	<b>077.374.365</b>	Needle set screw, Singer 14U285
374573	<b>077.374.573</b>	Screw set, Singer 644, 654
374617	<b>077.374.617</b>	Needle set screw, Singer 14U544, 554
376805	<b>077.376.805</b>	Needle set screw, Singer 14U32, 52
379505-451	<b>077.379.505</b>	Feed dog screw, Singer 500 series
382904 S	<b>078.382.904</b>	Loading cam screw, Singer
412694	<b>077.412.694</b>	Needle plate position screw, Singer 14U444
44468-458	<b>077.044.468</b>	Stop motion knob, Singer 9600, 710
445808	<b>077.445.808</b>	Bobbin case retaining plate stud washer, Singer 1802
446138	<b>077.446.138</b>	Screw washer, Singer 5417/3
		Heat shield mounting screw washer
		Spool pin screw washer
		Rotating hook bobbin case position plate screw washer (right)
446417	<b>077.446.417</b>	Retaining plate clip, Singer 1802
45285 S	<b>078.045.285</b>	Needle clamp screw, Singer 15-88/90
504050-851	<b>077.504.050</b>	Needle plate screw, Singer 14U34, 14U64, 14U85, 14U285, 14U286
514674-451	<b>077.514.674</b>	Retaining ring nut, Singer 4522, 4622
		Feed & rotating hook drive shaft bearing block mounting screw nut
53640	<b>077.053.640</b>	Bobbin winder stop screw nut, Singer
544065	<b>077.544.065</b>	Needle set screw, Singer 14U13—left
544103	<b>077.544.103</b>	Differential feed dog screw, Singer all 14U—differential
544115	<b>077.544.115</b>	Position finger screw, Singer 141

544211-052	<b>077.544.211</b>	Lower looper screw, Singer all 14U
		Auxiliary feed support bracket screw
544256	<b>077.544.256</b>	Lower knife screw, Singer 14U
544262-101	<b>077.544.262</b>	Presser foot screw, Singer 14U34
544407	<b>077.544.407</b>	Upper knife screw, Singer 14U
544413	<b>077.544.413</b>	Screw upper looper, Singer all 14U
544490	<b>077.544.490</b>	Feed dog screw, Singer all 14U M
549324	<b>077.549.324</b>	Needle set screw, Singer 14U13—left
691	<b>074.300.403</b>	Needle plate screw, Singer 15CL = 100032-0-01
725	<b>077.000.725</b>	Slide plate screw, Singer 15CL
8058	<b>077.008.058</b>	Needle clamp screw, Singer 2638
97		Presser bar screw, Singer 27CL
J1653	<b>077.001.653</b>	Shuttle driver spring screw, Brother, Sing., Alphas., BBL for JO1310A
M04L08A06	<b>077.040.080</b>	Extension table screw, Singer 14T948DS
356755-451	<b>077.356.755</b>	Needle clamp screw, Singer 3314/7/43, 2502-2530
421871	<b>077.421.871</b>	Retaining ring, Singer 4218
387126	<b>077.387.126</b>	Screw, Singer Quantum embr. frame
141942-825	<b>077.141.942</b>	Needle set screw, Singer 2712-2732
374353	<b>077.374.353</b>	Needle clamp thread screw, Singer
72274	<b>077.072.274</b>	Needle clamp positioned screw, Singer
374352	<b>077.374.352</b>	Needle clamp bracket screw, Singer

TOYOTA

11935	<b>077.011.935</b>	Needle set screw, White 7234, Toyota 6300, 6600
-------	--------------------	---

VIKING (HUSQVARNA)

014400422	<b>077.144.004</b>	Upper looper set screw, Brother 626, Viking 900, Bernina 800
028030246	<b>077.280.302</b>	Needle bar thread guide washer, Brother 626D, Bernina, Viking
028040242	<b>087.028.040</b>	Lower knife spring washer, Brother PL1050, Viking
060300616	<b>077.060.300</b>	Feed dog screw, Brother 900D, 920D, Babylock, Viking
060670612	<b>087.060.670</b>	Lower looper screw thread guide, Brother, Viking
142957001	<b>077.142.957</b>	Bed cushion screw, Viking
4110699-02	<b>077.411.069</b>	Race cover screw, Viking 2000-6690
4115904-01	<b>077.411.590</b>	Needle clamp screw, Viking 6690
4117560-01	<b>077.411.756</b>	Screw, Viking
4117830-01	<b>077.411.783</b>	Bobbin case tension adjusting screw, Viking
4117840-01	<b>077.411.784</b>	Tension spring screw, Viking
4119621-02	<b>077.411.962</b>	Tension spring screw, Viking OS
4119623-02	<b>078.411.962</b>	Needle plate screw, Viking 6230
4119650-02	<b>077.411.965</b>	Bobbin case tension spring screw, Viking 4011530, 4120972 (OS)
4119667-02	<b>077.411.966</b>	Bobbin case stop screw, Viking S205-S500
412005-901	<b>078.412.005</b>	Attachment screw, Viking 900, 1100
412006-901	<b>078.412.006</b>	Attachment screw, Viking 2000, 6000
412252-01	<b>078.412.225</b>	Screw, Viking #1
4125825-01	<b>077.412.582</b>	Screw set, Viking 100-600 for 411750
7231219-01	<b>077.723.121</b>	Presser foot screw, Viking S500
7285218-05	<b>077.728.521</b>	Needle clamp set screw, Viking
X141542-001	<b>077.141.542</b>	Chaining tongue screw, Viking for X7
4113543-01	<b>077.411.354</b>	Washer, Viking